

Feature Codes

Feature Access Codes are entered as a sequence on your telephone to use a particular feature.

Table 10 Feature Access Codes

Feature	Feature Access Code Sequences
Account Code	Cnf/Trn + #46 + Account code digits
Attendant Console	0
Automatic Busy Redial - On	#441
Automatic Busy Redial - Off	#442
Automatic Callback Cancel	#431
Background Music	
Telephone Speaker On	Ext. button + #490 + source number + #
Telephone Speaker Off	Ext. button + #491
External Speaker On	Ext. button + #492 + source number + #
External Speaker Off	Ext. button + #493
Call Forward - Any Calls (Internal and External)	
All Call	Ext. button + #6011 + Dest. No
Busy	Ext. button + #6021 + Dest. No.
No Answer	Ext. button + #6031 + Dest. No. + Timer + #
Busy No Answer	Ext. button + #6041 + Dest. No. + Timer + #
Cancel	Ext. button + #6051
Call Forward - Incoming Line Calls	
All Call	Ext. button + #6013 + Dest. No.
Busy	Ext. button + #6023 + Dest. No.
No Answer	Ext. button + #6033 + Dest. No. + Timer + #
Busy No Answer	Ext. button + #6043 + Dest. No. + Timer + #
Cancel	Ext. button + #6053

Feature Access Codes (continued)

Feature	Feature Access Code Sequences
Call Forward Any Call - Set for Another Station	
All Call	Ext. button + #6012 + ext. no. + Pass Code + # + Dest. No. + #
Busy	Ext. button + #6022 + ext. no. + Pass Code + # + Dest. No. + #
No Answer	Ext. button + #6032 + ext. no. + Pass Code + # + Dest. No. + # + Timer + #
Busy No Answer	Ext. button + #6042 + ext. no. + Pass Code + # + Dest. No. + # + Timer + #
Cancel	Ext. button + #6052 + ext. no. + Pass Code + #
Call Forward - Incoming Line Call - Set for Another Station	
All Calls	Ext. button + #6014 + ext. no. + Pass Code + # + Dest. No. + #
Busy	Ext. button + #6024 + ext. no. + Pass Code + # + Dest. No. + #
No Answer	Ext. button + #6034 + Dest. No. + # + ext. no. + Pass Code + # + Dest. No. + # + Timer + #
Busy No Answer	Ext. button + #6044 + Dest. No. + # + ext. no. + Pass Code + # + Dest. No. + # + Timer + #
Cancel	Ext. button + #6054 + ext. no. + Pass Code + #
Change Pass Code	Ext. button + #670 + ext. no. + old Pass Code + # + new Pass Code + #
Call Forward - System	
Activate	#620
Cancel	#621
Call Park	
Activate	Cnf/Trn + #33 + Orbit Number
Retrieve	Ext. button + #32 + Orbit Number
System Orbits	7000~7019
Call Pickup	
Incoming - Group Pickup	Ext. button + #5#34
Incoming - Directed Extension Pickup	Ext. button + #5#5 + Ext. Number to be picked up
Incoming - Directed Group Pickup	Ext. button + #5#32 + Group Number to be picked up

User Programming

Feature Codes

Table 10 Feature Access Codes (continued)

Feature	Feature Access Code Sequences
Incoming - Directed Extension Pickup	Ext. button + #5#22 + Ext. Number
On hold - Local Retrieve	Ext. button + #5#71
On hold - Remote Retrieve	Ext. button + #5#72 + Remote Ext. No.
On hold - Outside line Retrieve	Ext. button + #5#73 + Line on hold
On hold - Directed Extension Retrieve	Ext. button + #5#74 + Ext. No. on hold
Incoming - Any External Call	Ext. button + #5#9
Conferencing - Three Way	#494
Dialing	
Dial *	441
Dial #	440
DISA Security Code - Change	#658 + old Security Code (1~15 digits) + # + new Security Code (1~15 digits) + #
Do Not Disturb	
Local - On	#6091
Local - Off	#6092
Remote - On	#6191 + ext. no. + Pass Code Number + #
Remote - Off	#6192 + ext. no. + Pass Code Number + #
Door Lock Control	#12 + Door Lock Number
Door Phone Calling	#15 + Door Phone No. (01~24, depending on system size)
Emergency Call	#911
Flash - Short	#450
Flash - Long	#451
LCD Language (Change)	#495 + Language No.
LCR (Outgoing Call)	9
Message Waiting (MW)	
Release a received MW	#409
Retrieve a received MW	#408

Table 10 Feature Access Codes (continued)

Feature	Feature Access Code Sequences
Activate MW at another Station without Ringing	#63 + Ext. no.
Cancel MW at another Station without Ringing	#64 + Ext. no.
Messaging - Advisory	
Advisory Message - Activation	#411 + Message No.
Advisory Message - Cancellation	#412
Network Access Code (Private Network)	8 + Private Network No.
Night Ring Answer	#5#39
Off-hook Call Announce (Manual Mode)	Voice First: 2 ; Tone First: 1, 21, or 12
Override	
Busy, Do Not Disturb	2
Executive	3
Paging	
Page All Groups	#30
Page Individual Groups	#31 + Group Number
Emergency Page - Individual Group	#38 + Group Number
Emergency Page - All Groups	#37
Answer Page - All Groups	#5#35
Answer for External Group Page	#5#36 + Zone Number
Repeat Last Number Dialed	*0

User Programming

Feature Codes

Table 10 Feature Access Codes (*continued*)

Feature	Feature Access Code Sequences
Speed Dial Register	#66
Station (00~99)	* 1 + Index Number (00~99)
System	* 2 + Index Number (000~099)
	* 3 + Index Number (100~199)
	* 4 + Index Number (200~299)
	* 5 + Index Number (300~399)
	* 6 + Index Number (400~499)
	* 7 + Index Number (500~599)
	* 8 + Index Number (600~699)
	* 9 + Index Number (700~799)
Start Application	#18
Substitution of Dial “#”	440
Substitution of Dial “*”	441
Travelling Class Override	
Enter Code	#471
Change Code	#69 + Index Number + old Code + # + new Code + #
User Programming Mode	#9876
Voice Mail (VM)	
Direct Transfer to Voice Mail	#407 + Ext. Number
Volume Control - Beep	#6101
Volume Control - Ringing	#6102